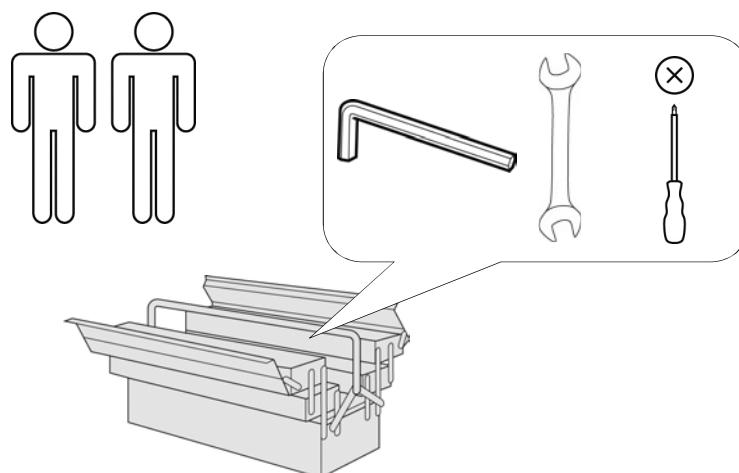 
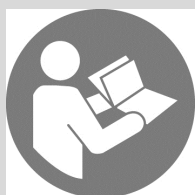 


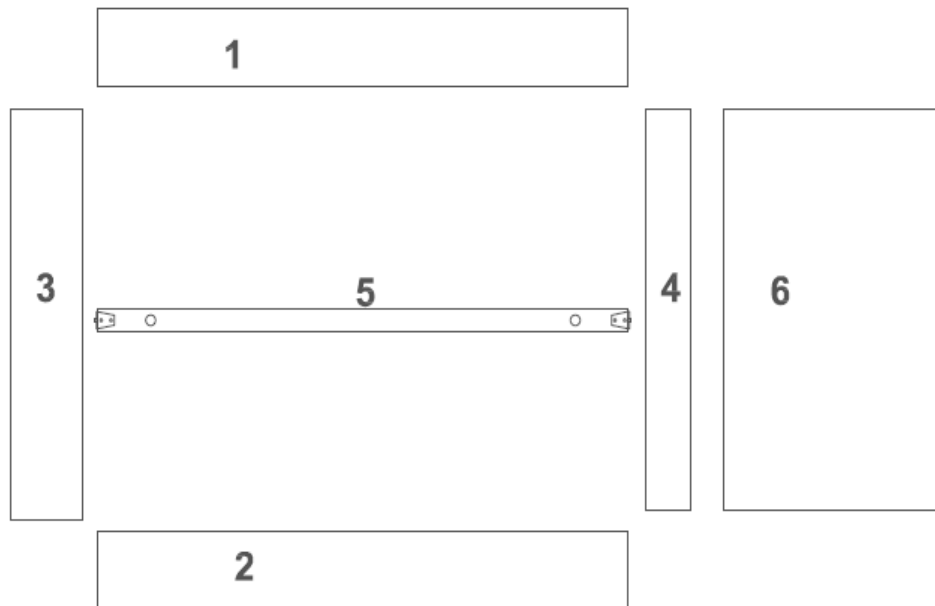 


- | | |
|----------------------------------|---------------------------------------|
| D Montageanleitung | GB Assembly instructions |
| FR Notice de montage | NL Handleiding voor de montage |
| CZ Montážní návod | IT Istruzioni di montaggio |
| RO Instrucțiuni de montaj | RU инструкция по сборке |
| PL Instrukcja montażu | SK Návod na montáž |
| HU Szerelési útmutató | TR Montaj talimatı |



0
10
20
30
40
50
60
70
80
90
100
110
120
130
140
150
160
170
180
190
200

Service • Assistenza • Dienstverlening • Serwis Servis • Szerviz • Сервисная служба	
Name • Nom • Nome • Naam Nazwa • Jméno • Názov • Név Denumire • İsim • Название	DB
Nr. • No. • N° • Номер • Č • Sz	SH41-51
Typ • Type • Tip • Típus • Tipo Тип	BK zerl. OHNE


 



 


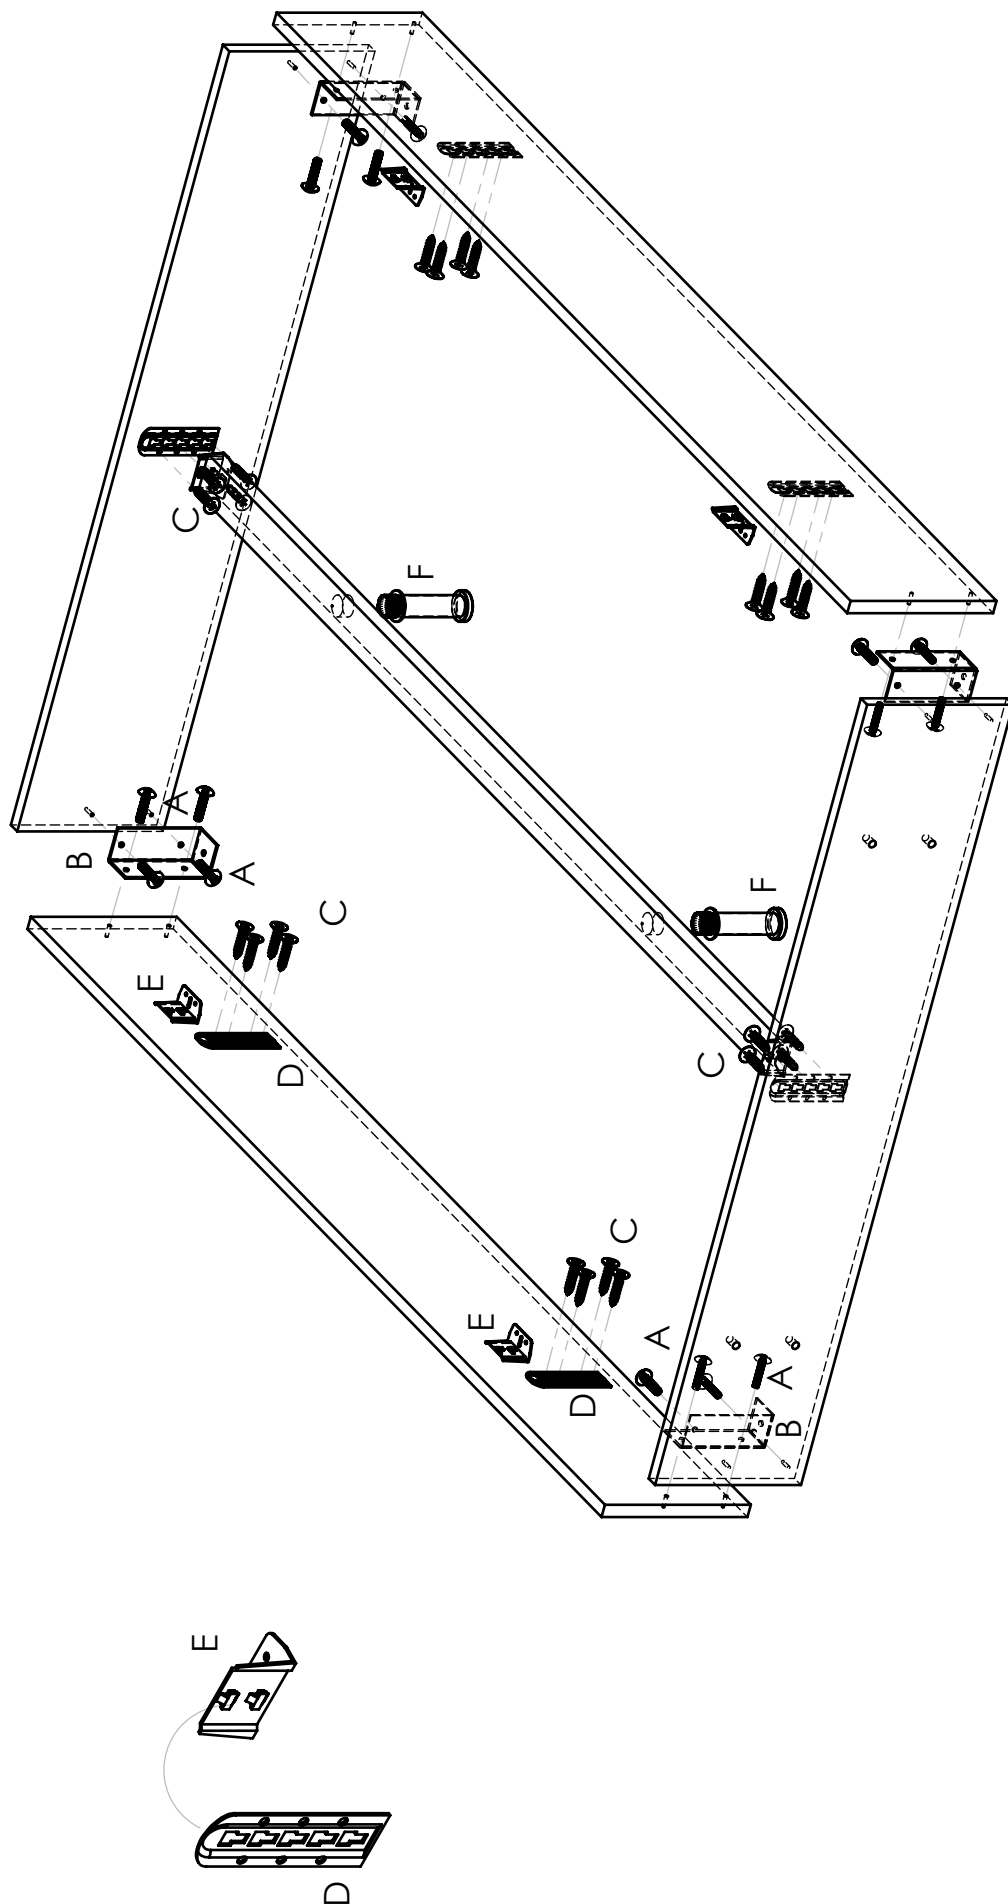 
A	B	C	D	E	F
16x 6x25	4x	24x 3,5x20	6x	4x	2x

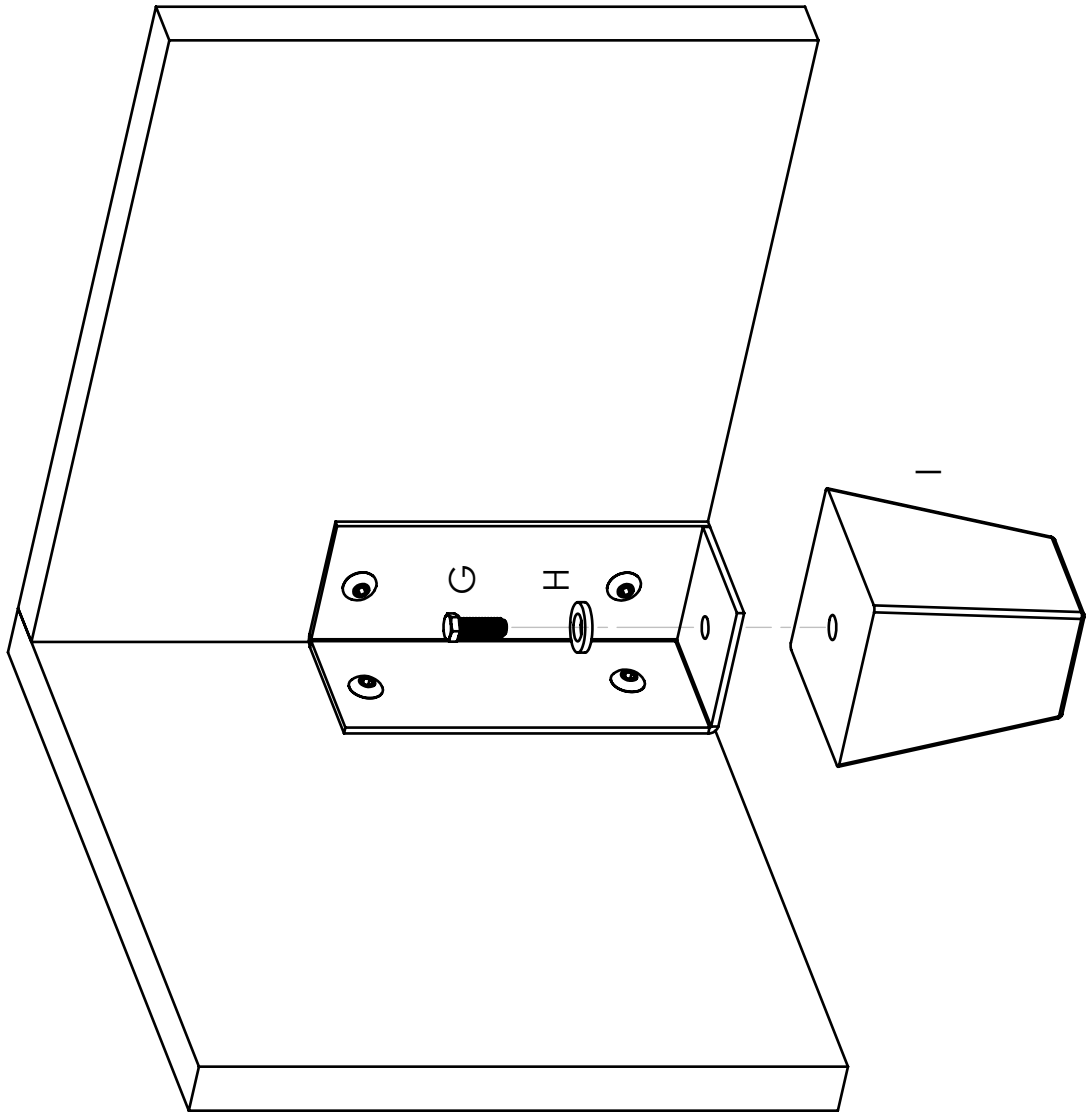 
G	H	I
4x M8x20	4x M8x20	4x

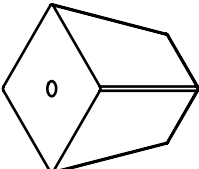 
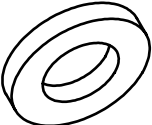 
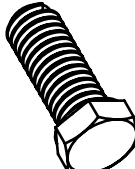 
P	Q	R
4x 8x60	4x M8	4x M8



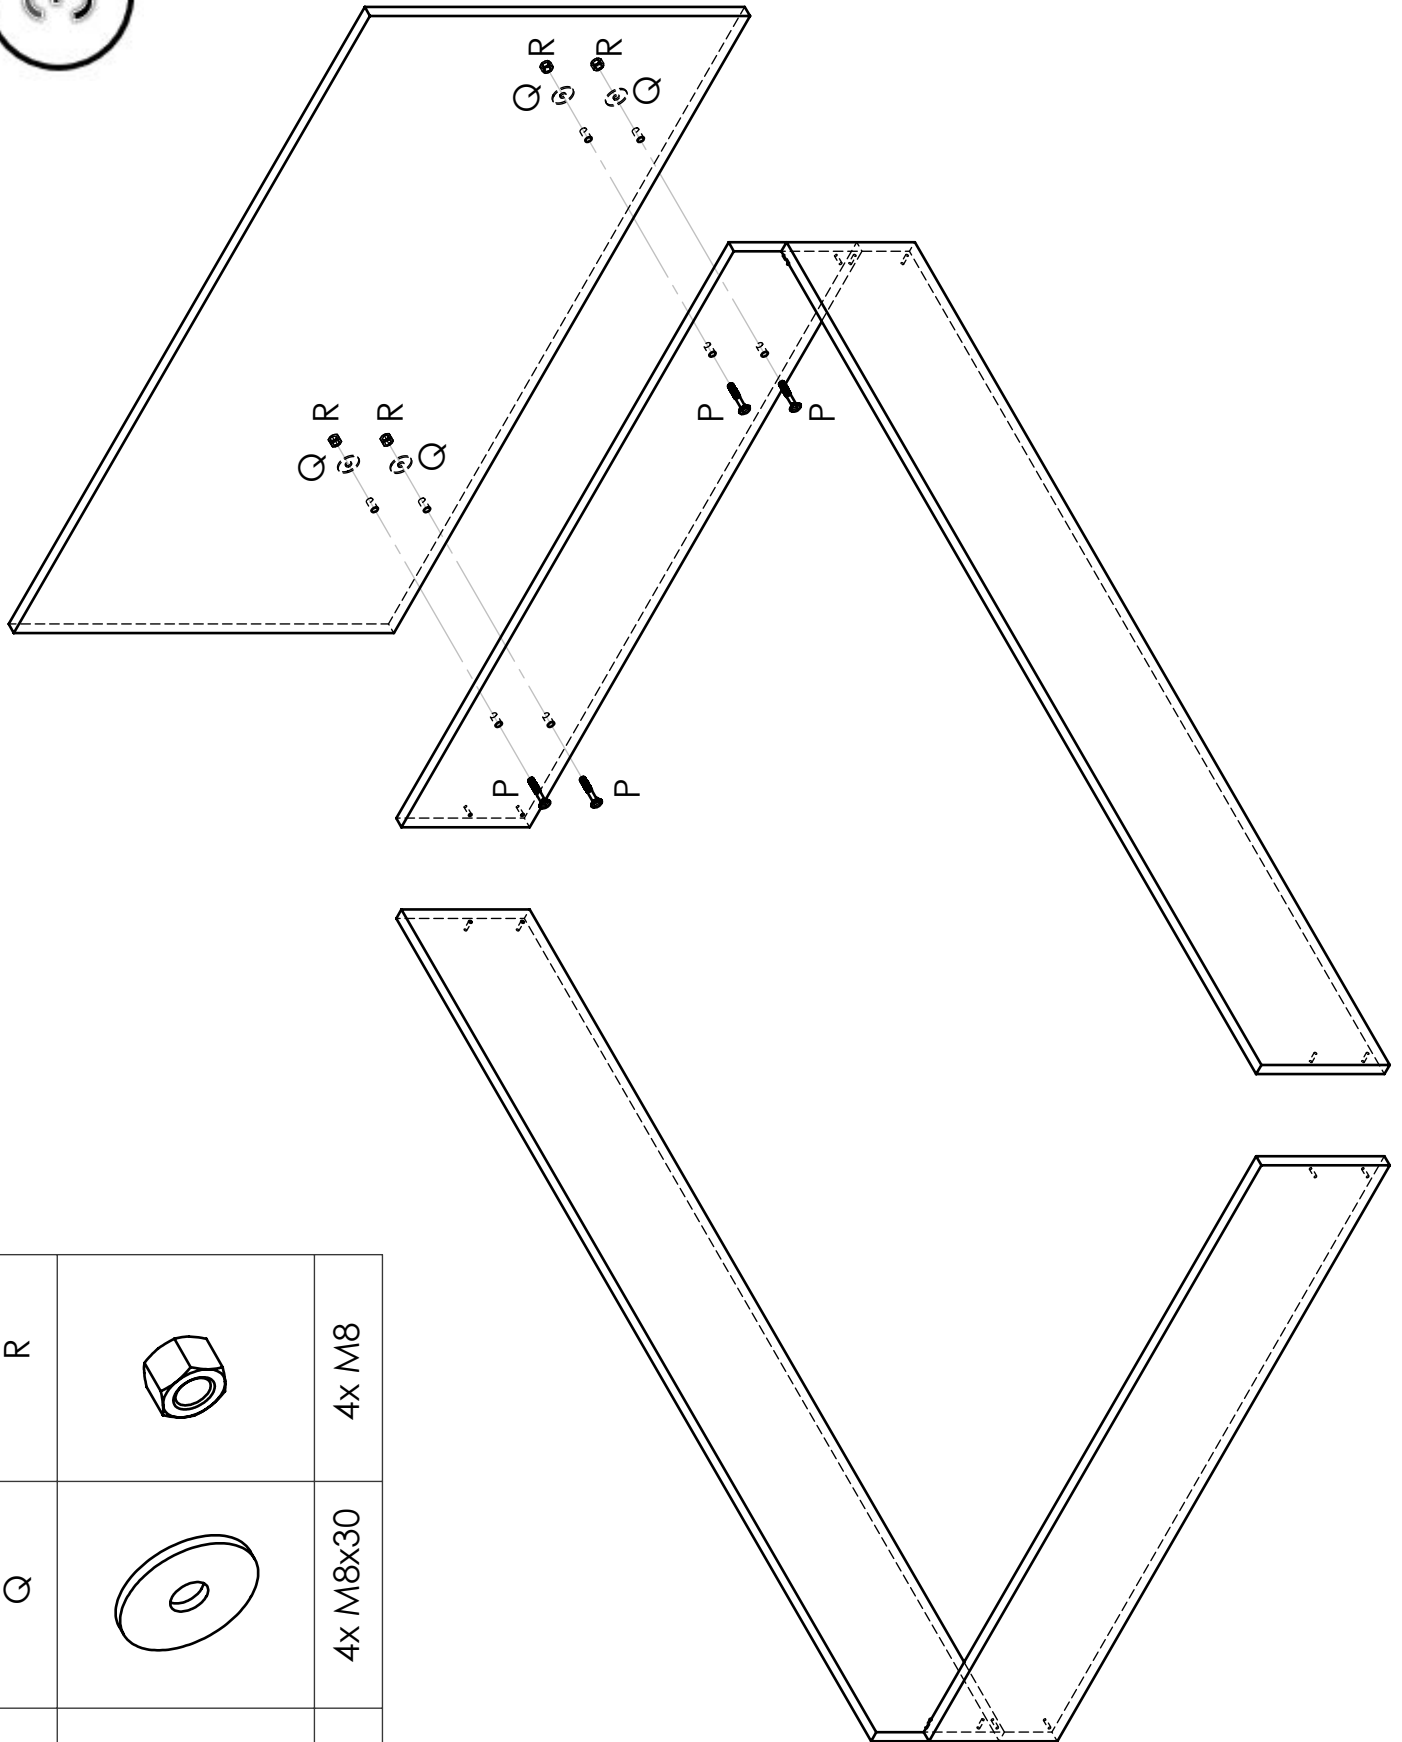 
A		16x 6x25
B		4x
C		24x 3,5x20
D		6x
E		4x
F		2x

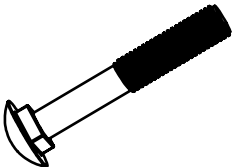 
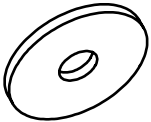 





I		4x
H		4x M8x20
G		4x M8x20

3.



P		4x 8x60
Q		4x M8x30
R		4x M8